

51 16 165 Removing and installing complete centre console**Necessary preliminary tasks:**


- Remove [cover for storage compartment](#)

**Important!**


Read and comply with notes on [handling wiring harnesses](#) and cables.
Switch off ignition before disconnecting plug connections.

**Note:**


Seats are shown removed for purposes of clarity.

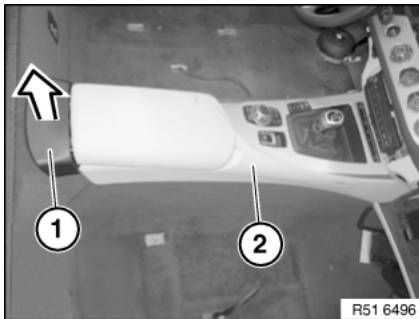


Remove rear cover (1) from centre console (2) towards top.
Disconnect plug connection underneath.

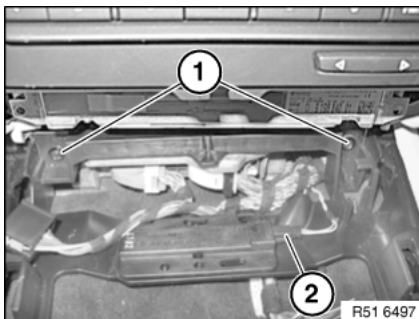

Release front screws (1).
Tightening torque [51 16 16AZ](#).
Unlock and disconnect cable (2).

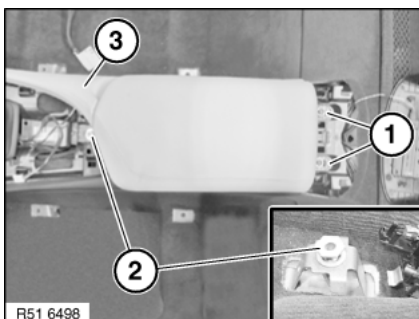

Release rear nuts (1).
Tightening torque [51 16 16AZ](#).
Release screw (2).
Tightening torque [51 16 17AZ](#).
Raise centre console (3) and unlock and disconnect plug connections underneath.
Note:
Height of attachment point can be regulated by compensating bush underneath screw connection for centre console.

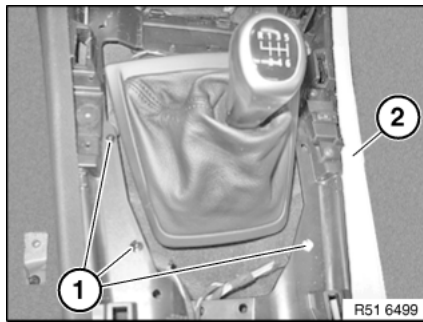

Unclip cable routing (1) from centre console (2).

Raise centre console (2) and unlock and disconnect plug connections on underside.

Remove centre console (2).

For informational purposes only. The information on this website is provided AS-IS with no warranties, express or implied, and is not guaranteed to be error-free, up-to-date or complete. NewTIS and BMW assume no liability for any loss or damage arising from the use or reliance on the information and content on this website. The content on this website is subject to change without notice.