

## 12 13 511 Replacing ignition coils (N54,N54T)



### *Necessary preliminary tasks:*

- Read out the fault memory of the DME control unit.
- Switch off ignition.
- Remove [acoustic cover](#)
- Remove right [trailing link](#)

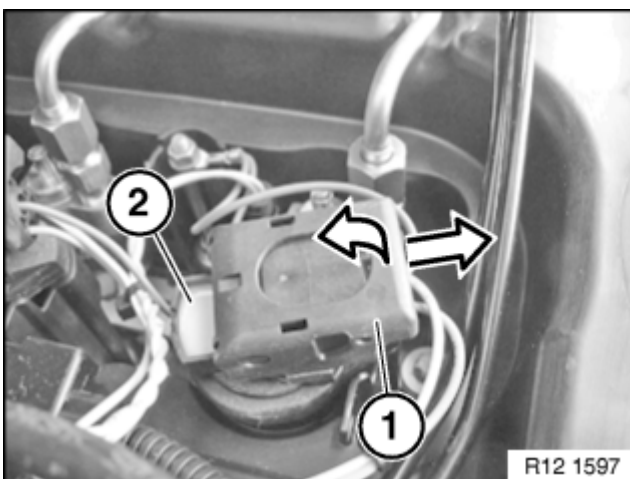


### **Important!**

Ignition coils must not be contaminated by fuel.

The resistance of the silicone material is reduced significantly by contact with fuel, which may cause the ignition coil to fail!

The silicone tube of the spark plug connector is coated with talc to reduce the pulling forces. The silicone tube must NOT be oiled or greased. This would greatly reduce the durability of the silicone material, which can lead to a malfunction of the ignition coil.



Unlock plug catch (1) of ignition coil (2) and disconnect plug.

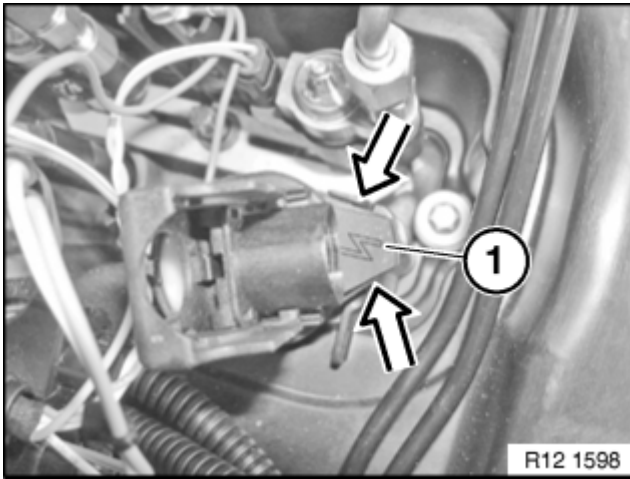
Ensure that cables are not crushed or damaged.

Repair damaged cable.

Pull out the ignition coil (2) slowly in a smooth upwards movement.

**Note:** There is a possibility that the silicone tube will tear and therefore be destroyed.

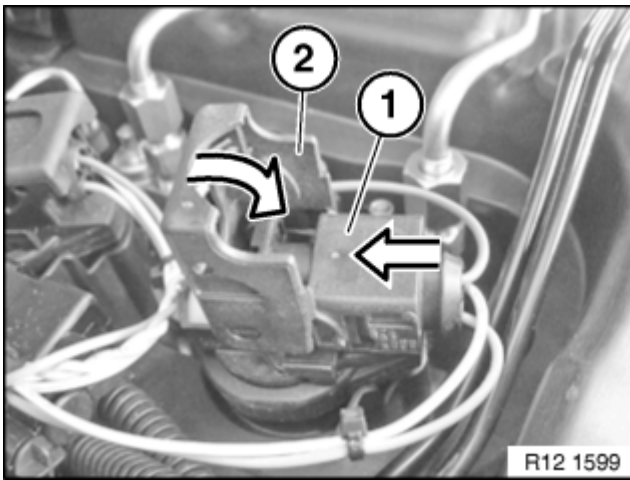
This procedure is applicable to all ignition coils.

**Installation note:**

Position the ignition coil (1) and gently push it to the limit position, if necessary by twisting it back and forth slightly. Then check anti-twist lock.

The rubber cap must completely surround the sealing collar of the cylinder head cover.

**Note:** If rubber parts are squashed, the ignition coil can slip out again during engine operation.

**Installation note:**

Push connector (1) with connector catch (2) open onto ignition coil.

Carefully close connector catch (2) in direction of arrow.

The connector catch must snap into place without great effort.

Ensure that cables are not crushed or damaged.

Repair damaged cable.

The connector must be positioned on the counter piece with hardly any gaps when the locking lever is being closed. In the process, the cheeks of the lever are positioned inside the counter piece.

**Note:** The locking lever can become deformed if it is not installed correctly. This means that there is no longer a safety lock on the plug connection. As a result, the connector can slip out during engine operation (loose contact, misfiring).

**Note:**

Clear diagnostic fault entries from fault memory.

For informational purposes only. The information on this website is provided AS-IS with no warranties, express or implied, and is not guaranteed to be error-free, up-to-date or complete. NewTIS and BMW assume no liability for any loss or damage arising from the use or reliance on the information and content on this website. The content on this website is subject to change without notice.