


[BMW E89 Z4 sDrive35i Roadster](#) / [Repair Manuals and Technical Data](#) / [84 Communication systems](#) / [84 31 Hands-free system \(microphone, speaker\)](#) /

32 31 003 Removing and installing/replacing upper section of steering column trim




Special tools required:

- [51 1 110](#)

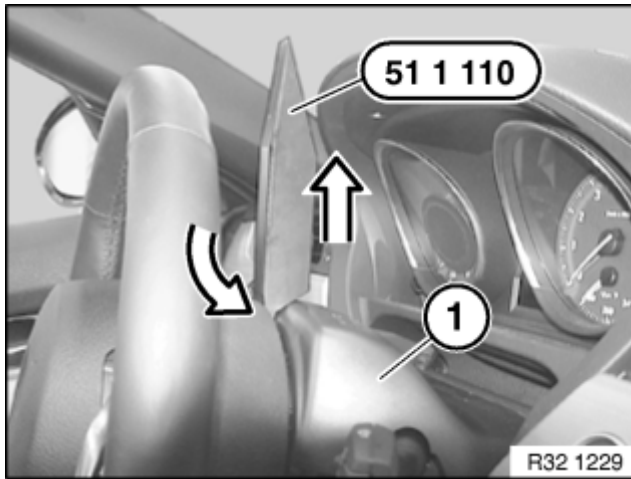

Move steering column into "lower" and "extended" position.

Lever out upper section of steering column trim (1) with special tool [51 1 110](#) in direction of arrow towards top.

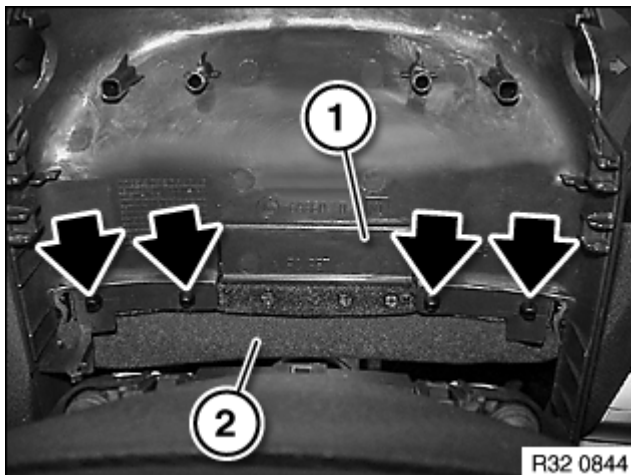


Tilt steering column trim (1) towards front.

Unclip steering column gap cover (2) from steering column trim.

Installation:

Tilt steering column trim towards rear, align by way of lock to lower section (of steering column trim) and press down.

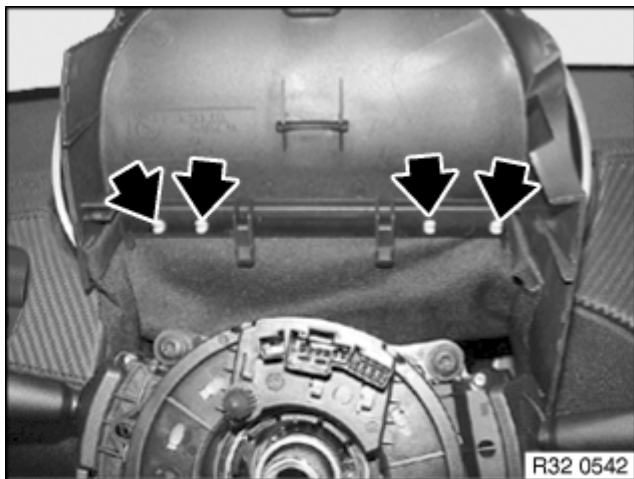

Tilt steering column trim forwards.

Unclip gap cover from steering column trim.

For informational purposes only. The information on this website is provided AS-IS with no warranties, express or implied, and is not guaranteed to be error-free, up-to-date or complete. NewTIS and BMW assume no liability for any loss or damage arising from the use or reliance on the information and content on this website. The content on this website is subject to change without notice.